


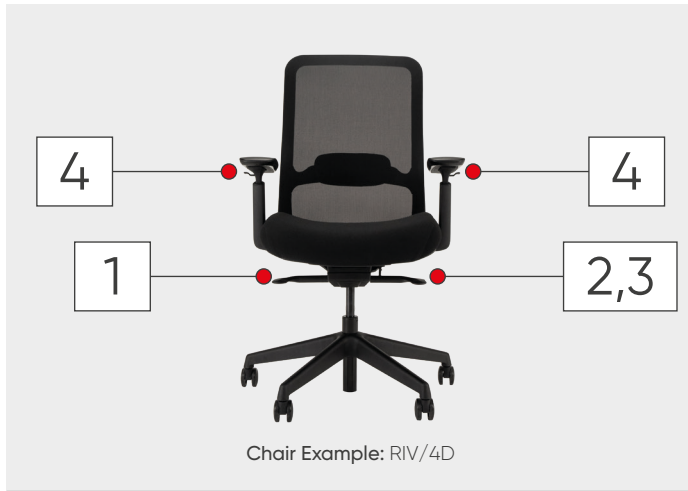

- 1** | **Seat Height Adjustment (Seat Right, Front)**
When standing, twist lever forward until seat is at desired height. To reduce seat height, twist lever down while seated.



- 2** | **Seat Depth Adjustment (Seat Left, Back)**
While seated, lift lever up and apply forwards or backwards momentum to the seat. To lock position, release lever.



- 3** | **Backrest Angle Adjustment (Seat Left, Front)**
While seated, twist lever up and apply slight pressure to backrest. To lock tilt position, twist lever down towards floor.



- 4** | **Lumbar Support Adjustment**
Manually position the lumbar support by sliding the support pad up and down the integrated tracking.



- 5** | **4D Arm Adjustment (Optional)**
Height: Lift lever and manually lift arm support
Depth: Manually slide arm support pad forwards/backwards.
Width: Manually slide arm support pad left/right.
Angle: Manually twist arm support pad inwards/outwards.



The Rivo Task Chair is now fully operational
For any further assistance or clarification, please contact sales on +44 (0) 1405 746000